

DMX CHANNEL'S FUNCTIONS AND THEIR VALUES (67 DMX CHANNELS) - V112

Mode/ Channel		Function		Value	Default Value	
Std	Ex					
1	1	PAN Movement 8bit		0-255	128	
2	2	Pan Fine 16bit: Fine control of Pan movement		0-255	0	
3	3	TILT Movement 8bit		0-255	128	
4	4	Tilt Fine 16bit: Fine control of Tilt movement		0-255	0	
	5	Speed Pan/Tilt Movement	Max to min speed	0-225	0	
			Blackout by movement	226-235		
			Blackout by all wheel changing	236-245		
			No function	246-255		
5	6	Pan Motor Continuous Rotation	Stop rotation by spinout	0-63	0	
			Stop rotation by shortcut	64-127		
			Forwards Pan rotation from fast to slow	128-189		
			No rotation	190-193		
			Backwards Pan rotation from slow to fast	194-255		
6	7	Tilt Motor Continuous Rotation	Stop rotation by spinout	0-63	0	
			Stop rotation by shortcut	64-127		
			Forwards Tilt rotation from fast to slow	128-189		
			No rotation	190-193		
			Backwards Tilt rotation from slow to fast	194-255		
7	8	Shutter, Strobe	Shutter closed	0-10	15	
			No fuction (Shutter open)	11-20		
			Strobe effect slow to fast	21-117		
			No fuction (Shutter open)	118-126		
			Pulse-effect in sequences	127-180		
			No function (Shutter open)	181-191		
			Random strobe effect slow to fast	192-245		
			No function (Shutter open)	246-255		
8	9	Dimmer Intensity: 0 to 100%		0-255	0	
9	10	Dimmer Intensity Fine		0-255	0	
10	11	Zoom Adjustment From Small To Big: From 4° to 52°		0-255	128	
11	12	Zoom Fine		0-255	0	
12	13	Focus: From near to far		0-255	128	
13	14	Focus Fine		0-255	0	
	15	Auto Focus	Auto Focus Off	0-50	0	
			5m	51-100		
			7.5 m	101-150		
			10 m	151-200		
			15 m	201-255		
	16	Auto Focus Fine		0-255	0	
14	17	Colour Wheel	Open / white	0-3	0	
			Colour 1: CTB 1/4			4-7
			Colour 2: Magenta			8-11

Mode/ Channel		Function			Value	Default Value
14	17	Colour Wheel	Colour 3: Congo Blue		12-15	0
			Colour 4: Green		16-19	
			Colour 5: Orange		20-23	
			Colour 6: Blue		24-27	
			Colour 7: Red		28-31	
			Colour indexing		32-127	
			Forwards rainbow effect from fast to slow		128-189	
			No rotation		190-193	
			Backwards rainbow effect from slow to fast		194-255	
15	18	Colour Wheel Fine			0-255	0
16	19	Cyan Colour (0-white, 255-100% Cyan)			0-255	0
	20	Cyan Colour Fine			0-255	0
17	21	Magenta Colour (0-white, 255-100% magenta)			0-255	0
	22	Magenta Colour Fine			0-255	0
18	23	Yellow Colour (0-white, 255-100% Yellow)			0-255	0
	24	Yellow Colour Fine			0-255	0
19	25	CTO Colour (0-white, 255-100% CTO)			0-255	0
	26	CTO Colour Fine			0-255	0
20	27	CTP Colour (0-white, 255-100% CTP)			0-255	0
	28	CTP Colour Fine			0-255	0
	29	Reserved				
	30	Reserved				
	31	Reserved				
21	32	Rotating Gobo Wheel	Open		0-9	0
			Rot. gobo 1: Dot Line 11		10-19	
			Rot. gobo 2: Star Field		20-29	
			Rot. gobo 3: Nested Triangle		30-39	
			Rot. gobo 4: Infinite Stairs		40-49	
			Rot. gobo 5: Bread Stix		50-59	
			Rot. gobo 6: Circle of Squares		60-69	
			Rot. gobo 7: Nested Rings Yellow		70-77	
			Gobo 1 shake slow to fast		78-93	
			Gobo 2 shake slow to fast		94-109	
			Gobo 3 shake slow to fast		110-125	
			Gobo 4 shake slow to fast		126-141	
			Gobo 5 shake slow to fast		142-157	
			Gobo 6 shake slow to fast		158-173	
			Gobo 7 shake slow to fast		174-189	
			Gobo wheel rotation forwards from fast to slow		190-221	
			No rotation		222-223	
			Gobo wheel rotation f backwards from slow to fast		224-255	


Mode/ Channel		Function		Value	Default Value
22	33	Rotating Gobo Wheel Index, Rotation	Gobo indexing	0-127	0
			Forwards gobo rotation from fast to slow	128-189	
			No rotation	190-193	
			Backwards gobo rotation from slow to fast	194-255	
23	34	Rotating Gobo Wheel Index, Rotation Fine		0-255	0
24	35	Rotating Gobo Wheel 2	Open	0-9	0
			Rot. gobo 1: Conical Tunnel Effects 	10-19	
			Rot. gobo 2: Smoke Rings 	20-29	
			Rot. gobo 3: Fireworks 	30-39	
			Rot. gobo 4: Abstract Square 	40-49	
			Rot. gobo 5: Iron Filings 	50-59	
			Rot. gobo 7: Deep Forest 	60-69	
			Rot. gobo 7: Tree Bark 	70-77	
			Gobo 1 shake slow to fast	78-93	
			Gobo 2 shake slow to fast	94-109	
			Gobo 3 shake slow to fast	110-125	
			Gobo 4 shake slow to fast	126-141	
			Gobo 5 shake slow to fast	142-157	
			Gobo 6 shake slow to fast	158-173	
			Gobo 7 shake slow to fast	174-189	
			Gobo wheel rotation forwards from fast to slow	190-221	
			No rotation	222-223	
			Gobo wheel rotation backwards from slow to fast	224-255	
25	36	Rotating Gobo Wheel 2 Index, Rotation	Gobo indexing	0-127	0
			Forwards gobo rotation from fast to slow	128-189	
			No rotation	190-193	
			Backwards gobo rotation from slow to fast	194-255	
26	37	Rotating Gobo Wheel 2 Index, Rotation Fine		0-255	0
27	38	Animation Wheel	No rotation 	0-7	0
			Forwards rotation from fast to slow	8-127	
			No rotation 	128-135	
			Backwards rotation from slow to fast	136-255	
28	39	Iris	Max. diameter to Min.diameter	0-191	0
			Pulse closing fast to slow	192-223	
			Pulse opening slow to fast	224-255	
	40	Iris Fine		0-255	0
29	41	Prism 1	Open	0-127	0
			Prism 1: 5-facet circular 	128-255	
30	42	Prism 1 Index, Rotation	Prism indexing	0-127	0
			Forwards prism rotation from fast to slow	128-189	
			No rotation	190-193	

Mode/ Channel		Function			Value	Default Value	
30	42	Prism 1 Index, Rotation	Backwards prism rotation from slow to fast			194-255	0
	43	Prism 1 Index, Rotation Fine			0-255	0	
31	44	Prism 2	Open			0-127	0
			Prism 2: 4-facet linear			128-255	
32	45	Prism 2 Index, Rotation	Prism indexing			0-127	0
			Forwards prism rotation from fast to slow			128-189	
			No rotation			190-193	
			Backwards prism rotation from slow to fast			194-255	
	46	Prism 2 Index, Rotation Fine			0-255	0	
33	47	Frost 1: 0-100%			0-255	0	
34	48	Frost 2: 0-100%			0-255	0	
35	49	Blade 1A: Open to Close			0-255	0	
	50	Blade 1A Fine: Open to Close Fine			0-255	0	
36	51	Blade 1B: Open to Close			0-255	0	
	52	Blade 1B Fine: Open to Close Fine			0-255	0	
37	53	Blade 2A: Open to Close			0-255	0	
	54	Blade 2A Fine: Open to Close Fine			0-255	0	
38	55	Blade 2B: Open to Close			0-255	0	
	56	Blade 2B Fine: Open to Close Fine			0-255	0	
39	57	Blade 3A: Open to Close			0-255	0	
	58	Blade 3A Fine: Open to Close Fine			0-255	0	
40	59	Blade 3B: Open to Close			0-255	0	
	60	Blade 3B Fine: Open to Close Fine			0-255	0	
41	61	Blade 4A: Open to Close			0-255	0	
	62	Blade 4A Fine: Open to Close Fine			0-255	0	
42	63	Blade 4B: Open to Close			0-255	0	
	64	Blade 4B Fine: Open to Close Fine			0-255	0	
43	65	All Blade Rotation: +/- 90°			0-255	128	
	66	All Blade Rotation Fine			0-255	0	
44	67	Control, Reset, Internal Programs	unused			0-4	0
			Display Off			5-9	
			Display On			10-14	
			Display Invert Off			15-19	
			Display Invert On			20-24	
			Auto fan control mode			25-26	
			Stage fan control mode			27-28	
			Silence fan control mode			29-30	
			Super Silence fan control mode			31-32	
			Constant Fans Off			33-34	
Constant Fans On			35-36				
unused			37-44				

Mode/ Channel		Function	Value	Default Value
44	67	Control, Reset, Internal Programs	Square Law	45-49
			Linear	50-54
			1.2K	55-58
			2.4K	59-62
			16K	63-66
			25K	67-69
			Gobo correction Off	70-74
			Gobo correction On	75-79
			All motor reset	80-84
			Scan motor reset	85-87
			Colours motor reset	88-90
			Gobo motor reset	91-93
			unused	94
			Reset P/T Fade Off	95
			Reset P/T Fade On	96
			Other motor reset	97-99
			Frost Progressive Off	100-102
			Frost Progressive On	103-105
			CMY speed Fast	106-108
			CMY speed Medium	109-111
			CMY speed Slow	112-114
			unused	115-117
			unused	118-120
			Sun Protection Off	121-123
			Sun Protection On	124-126
			Pan Reverse Off	127-129
			Pan Reverse On	130-132
			Tilt Reverse Off	133-135
			Tilt Reverse On	136-138
			Pan Degree 540°	139-141
			Pan Degree 630°	142-144
			Tilt Degree 540°	145-147
			Tilt Degree 270°	148-150
			Feedback Off	151-153
			Feedback On	154-156
			Init PAN Off	157-159
			Init PAN On	160-162
			Init TILT Off	163-165
			Init TILT On	166-168
			Prerig INIT Off	169-171
			Prerig INIT On	172-174

Mode/ Channel		Function	Value	Default Value
44	67	Control, Reset, Internal Programs	Reset Mode (Fast)	175-177
			Reset Mode (All Rot Gobos)	178-180
			Pan/Tilt Spd Fast	181-183
			Pan/Tilt Spd Medium	184-186
			Pan/Tilt Spd Slow	187-189
			Pan/Tilt Spd FS Mode	190
			Pan/Tilt Spd Tracking 360	191
			unused	192
			Zoom/Focus Spd Fast	193-195
			Zoom/Focus Spd Medium	196-198
			Zoom/Focus Spd Slow	199-201
			Reset LED Fade Off	202-204
			Reset LED Fade On	205-207
			Defog Off	208-210
			Defog Auto	211-213
			Defog On	214-216
			Framing Constant Off	217-219
			Framing Constant On	220-222
			unused	223-255

*Errors and omissions for all information given in this DMX chart are possible.
All information is subject to change without prior notice.*

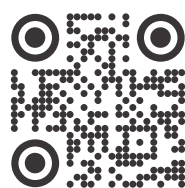

SCAN FOR MORE

www.ayrton.eu



AYRTON
Digital Lighting